

Hart InterCivic Quality and Information Security Policy

Hart InterCivic is committed to consistently providing high quality products and services for its customers through adherence to its established hardware and software Quality Management Systems, complying with customer, statutory and regulatory requirements, and a commitment to continual improvement. Hart InterCivic is also committed to the integrity and the security of the information used in the product development process, in the products themselves, and in our management of customer data during the implementation process.

This DOCUMENT and the SOFTWARE, HARDWARE, and FIRMWARE to which it pertains contain confidential and proprietary information belonging exclusively to Hart InterCivic, Inc. No part of this publication may be modified, reproduced, stored in a retrieval system, or transmitted in any form, distributed by any electronic or mechanical means, photocopied, recorded, or otherwise reproduced or distributed without prior written permission from authorized personnel at Hart InterCivic, Inc. Any person receiving this document has a duty to take reasonable precautions preventing unauthorized use or disclosure of the contents.

Trademarks

Hart InterCivic and Verity are registered trademarks of Hart InterCivic, Inc.

Hart InterCivic disclaims any proprietary interest in the marks and names of others.



Hart InterCivic, Inc.
15500 Wells Port Drive
Austin, TX 78728

Document Number 6651-018 A

© 2019 Hart InterCivic, Inc.
All Rights Reserved

about this guide

This *Verity Field Guide* is a portable guide to using Verity Print.



Verity Print Field Guide



VERSION 3.1.0

contents

Verity Print.....	5
setting up Verity Print	6
setting up the ballot printer	6
setting up the Verity Print	8
Verity Print orientation.....	11
screen orientation.....	11
report printer operation.....	12
printing ballots.....	13
other tasks and features.....	16
resolving printing errors	16
spoiling printed paper ballots	16
printing a Ballot Count report	17
shutting down Verity Print	18

Verity Print

Verity Print is an on-demand ballot printing device; using Verity Print, you can print and issue blank paper ballots to voters using an attached ballot printer. The voter then hand-marks their ballot and casts it either using Verity Scan, or into a ballot box to be scanned centrally.



vDrives are used to transfer digital ballot styles from the Verity election definition software to Verity Print, and to transfer device audit log data from Verity Print to Verity software (vote data is not stored on Verity Print). vDrives are inserted into a standard USB port located in a locked and sealed compartment; each Verity Print has its own vDrive.

NOTE: *Software startup for each unit may take several minutes, due to security and data integrity checks that the Verity software performs. This process is included in the design of the Verity Voting System to verify the authenticity of the software before allowing it to operate.*

- c)** The main tray extender kit for 17"/20" ballots includes two parts:
- The front piece installs into the MP Tray door, and is used to support the ballots as they exit the printer.
 - The rear piece replaces the stock paper stop and rear tray extension cover. Once installed, the extender can support 14", 17", and 20" paper; however, the stock paper stop must be reinserted to support 11" paper.
- d)** Reinsert and close the paper tray. ▶



Loading ballot paper in the manual paper tray (MPT)

In some jurisdictions, the manual paper tray must be used for larger paper sizes; follow local procedures.

- a)** Open the front Manual Paper Tray (MPT) and extend the tray as shown. ▶



- b)** If applicable, place the optional tray extender in the tray. ▶



- c)** Load ballot paper in the tray. Ensure the paper guides on the sides of the tray are set snug to the paper.
- 5.** Do not power on the printer at this time.

setting up the Verity Print

1. Position the Verity Print on a table next to the ballot printer.
2. Follow local procedures to the remove tamper seal from the Verity Print handle, if applicable. Unlock the case (if locked). Open the case and remove the power brick and power cord from the storage compartment. Close the compartment and case. ▶



3. Plug the power cord into the power brick, and then plug the power brick into the back of the Verity Print (flat side up). ▼

IMPORTANT: Do not plug the power cord into the surge protector/strip yet.



4. Plug the flat end of the USB printer cable from the ballot printer into the back of the Verity Print, with the notch facing up. ▼



5. Open the Verity Print case and lock the lid brace in place. ▶


IMPORTANT: Never tilt a device up by the handle while cords are connected – this can damage the cord where it connects to the device, or cause damage to the device itself.



6. Unlock (A), unlatch (B), and remove the tablet (C). ▼



7. Log the red flat CFAST seal number on the Security Log - AM
Seat the tablet in the cradle (A), tilt it back (B), and lock it in place (C).

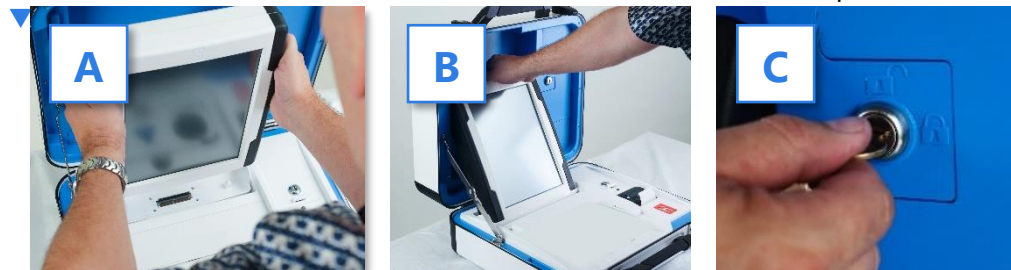

8. Verify the Verity Print device seals, per local procedure.

9. Plug the power cord into AC power. A green light should illuminate on the power brick when AC power is present. ▶



10. Press the switch on the bottom right side of the *ballot printer* to power it on.



11. Press the *red* button on the back of the Verity Print to power it on. ▶

- During the power on process, a Power-On Self Test report will print on Verity Print's built-in printer. This report will indicate any hardware or connection issues; if any issues are noted, check connections and power off the printer and the Verity Print. Power the printer on first before powering on the Verity Print.



12. (*if applicable*) If your jurisdiction uses the AutoBallot barcode reader: Wait until the Verity Print finishes powering up and displays the **Enter Poll Worker Code** screen, and then connect the AutoBallot barcode reader to the USB connection located on the vDrive compartment above the report printer. ▶




Verity Print orientation

screen orientation

When powered up for the first time the device is used during a voting event, Verity Print should display the Enter Poll Worker Code screen. ►



In addition to the date and time, the following appears at the bottom of the screen:



- **Ballots:** The number of ballots printed using the Verity Print for the current election; at the start of a voting event, this number should be zero.
- **Lifetime:** The number of ballots printed using the Verity Printed for the lifetime of the device (for all elections).
- **Battery and AC power indicators:** A green battery icon indicates the battery is connected; a green plug icon indicates AC power is connected. Specific battery power level is found on the Verity Print Power-On Self Test report.

NOTE: *If AC power is not available, the device will automatically switch over to battery power, and a warning message will display. To dismiss the message and continue operating on battery power, touch "If the power is out, touch here to use battery".*

When battery power is low, and AC power is disconnected, a warning message will appear on the device screen. Reconnect the device to AC power.

report printer operation

1. The thermal report printer is located on the right-hand side of the Verity Print. ▶



2. To open the paper compartment: While standing in front of the device, pull the lever on the top of the printer cover towards you and lift up to open the paper compartment. ▶



3. To replace paper: Place the new paper roll into the printer as shown. Paper must roll up from the bottom. ▶



4. Close the printer cover. The paper must extend out from underneath the front edge of the cover. The white button can be used to advance the paper. ▶



printing ballots

1. Setup and power on the Verity Print. **Confirm that you are running on AC power** (see page 11). Verify that the printer displays **READY TO PRINT**. ▶

If the printer is offline, or in power save/sleep mode, press the **ONLINE** button to wake up the printer. ▶




2. When prompted, enter the Poll Worker Code and select **Accept**. ▶




3. The Ready to issue ballots screen will display. Select **Issue a ballot**. ▶


If your jurisdiction has **Verity AutoBallot**, you can use the barcode reader attached to the Verity Print to scan barcode labels produced by your electronic pollbook. When using AutoBallot, you will scan the barcode, skipping steps 3-6 of this section.

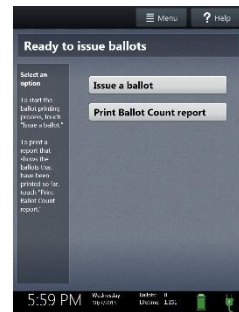

4. Choose the ballot language, and then select **OK**. ▶

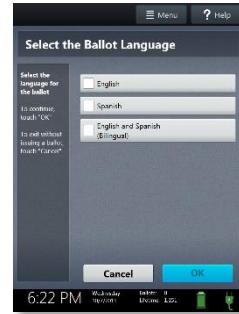

5. Choose the precinct, and then select **OK**. ▶

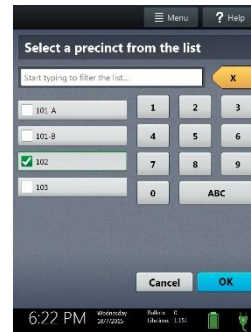


6. (*Primary Elections only*) Choose the party, and then select **OK**.

7. Verify that the correct precinct and language are displayed on the screen (and party, if this is a primary election), and then select **Yes, print the ballot**. ▶

- To change the quantity of ballots to print, select **Change Quantity**, enter the number of ballots to print, and then select **Accept**. You may print up to 100 ballots at a time.
- To issue provisional ballots, select **Mark as Provisional**. By default, Verity Scan will not accept provisional ballots unless configured otherwise.



8. Wait while the ballots print on the attached ballot printer. ▶

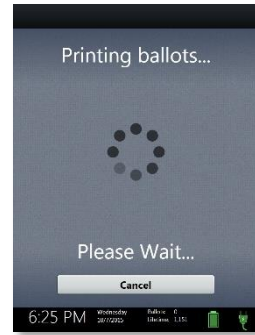

other tasks and features

resolving printing errors

If an error occurs during printing (for example, the printer is out of paper), the nature of the error will be displayed on the screen. Follow the directions on the screen to resolve the issue. If you are unable to resolve the issue, contact your elections office. ▶




spoiling printed paper ballots

To spoil a ballot that has already been printed from Verity Print, or to spoil a preprinted paper ballot, follow your local procedures (for example, filling out a spoiled ballot log and envelope).

printing a Ballot Count report

You can print a Ballot Count report on Verity Print at any time.

1. On the Ready to issue ballots screen, select **Print Ballot Count report**. ▶

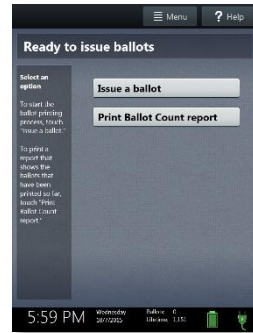


2. Wait while the report prints on Verity Print's built-in report printer. File the report according to local jurisdiction rules.

accessing Verity Print help

Verity Print is equipped with built-in help text that can be accessed from the touchscreen. The content of the Help screen will vary depending on the context.

1. Select **Help** at the top right of the Verity Print screen to access the Help screen. ▶

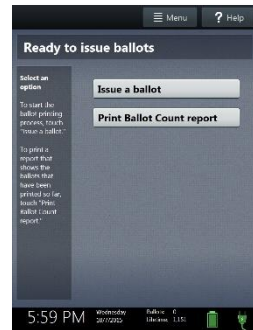

2. To exit the help screen and resume issuing ballots, select **Exit Help** on the bottom right of the Help screen.

shutting down Verity Print

1. When you have finished printing ballots and reports, press the *red* power button on the back of the Verity Print to power it off. ►



IMPORTANT: Wait for the Verity Print to be completely powered down and showing a black screen if you will be unlocking and removing the tablet. If stowing the tablet, make sure to lock it in with the key *and* pull the blue latch down to secure it in place.

NOTE: *The Verity power cord has a locking connector. When inserting the connector into a Verity device, it will make a small “click.” To disconnect the power cord, grasp the cord at the base of the black connector molding where it connects to the Verity device, and slide back the sleeve. This will unlock the connection so that the cord may be removed.*

2. Follow your local jurisdiction’s guidelines, including chain-of-custody procedures, when transferring equipment to your central counting location. If you are leaving equipment in place, be sure to properly secure all equipment, preferably behind a locked door. You may use the space below to document local transfer procedures.

local procedures

notes:



©2019 Hart InterCivic
All Rights Reserved

Hart InterCivic and Verity are registered trademarks of Hart InterCivic, Inc.